



Position of engine code on engine block


1.0 EcoBoost /Duratec/1.1 Duratec

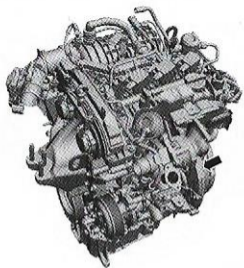


1.2 Duratec (FP4)

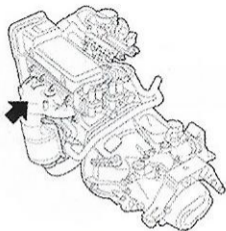


1.3 Endura-E

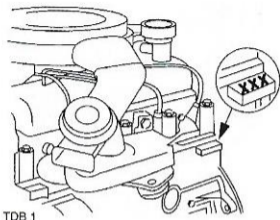


**Zetec-E/SE/2.0 Duratec-ST/
Duratec-16V/RS/DOHC**

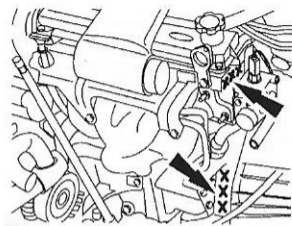


1.3/1.6 Duratec-8V

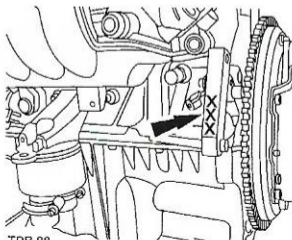









**1.2/1.6 Duratec-16V Ti-VCT (Sigma)
1.6 EcoBoost**

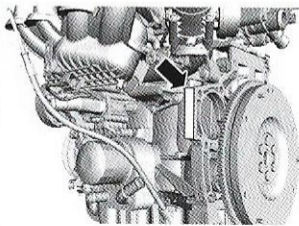


**1.8/2.0/2.3 Duratec-HE/SCi
2.0 Duratec-ST (MI4) / 2.0 EcoBoost**

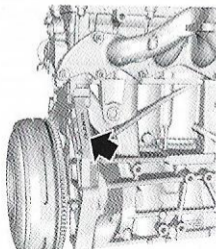


Position of engine code on engine block

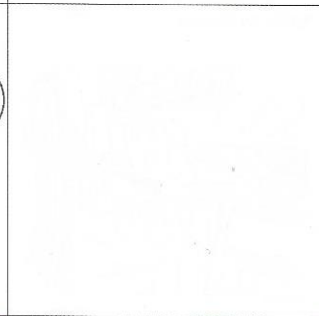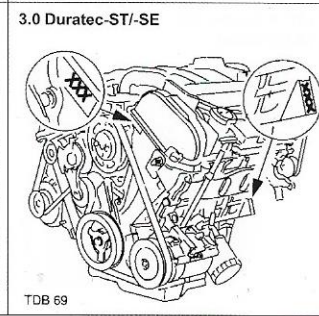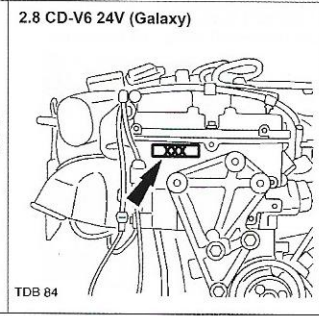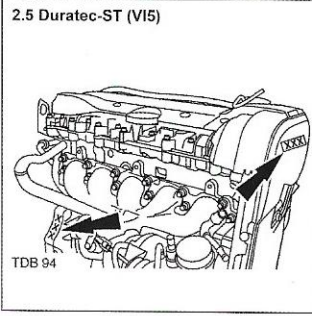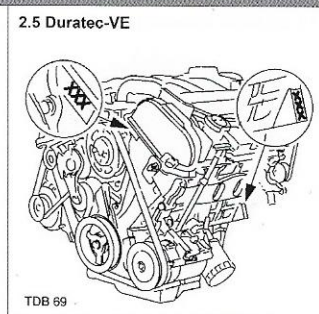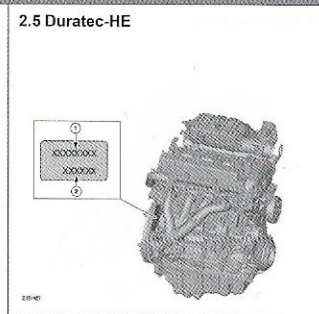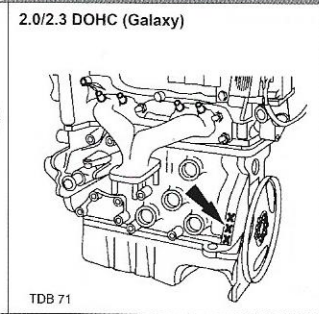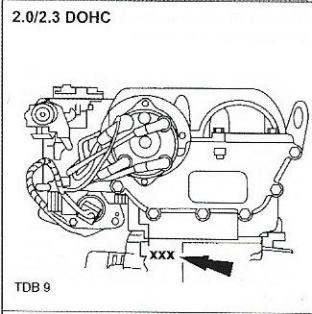

1.3 Duratorq-TDCi (FD4)

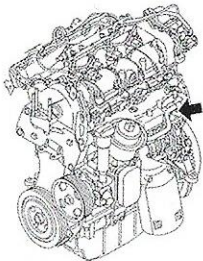


1.4/1.5/1.6 Duratorq-TDCi (DV)

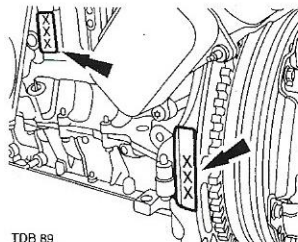


TDB 89

1.8 Endura-DE/-DE(TCI)/-DI
1.8 Duratorq-TDCi

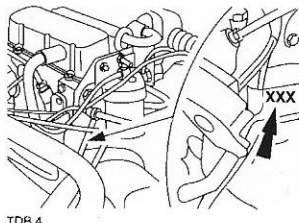


TDB 4

1.9 TDI Unit Injector (Galaxy)

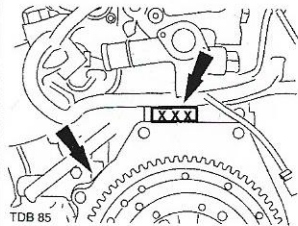


TDB 85

2.0 Duratorq-DI/-TDCi

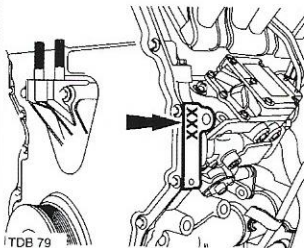

TDB 79

2.0/2.2 Duratorq-TDCi (DW)

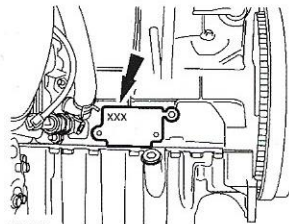


TDB 91

2.0 Duratorq-TDCi



Position of engine code on engine block

2.2/2.4 Duratorq-TDCi

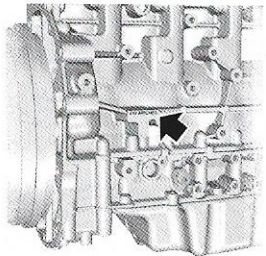

3.2 Duratorq-TDCi

